



RV Door Lock Cude Lock ZK-60

Product Specifications & Details

Product Name: ZK-60 Smart RV Door Lock
Dimensions: 5.9 in × 4.7 in × 3.5 in (L × W × H)
Surface Finish: Anti-oxidation, UV-resistant, and weatherproof powder coating for long-lasting outdoor protection.

Control Methods: Mechanical key , remote fob, keypad password, and interior safety lever.

Weight: 3.5 lbs Country of Origin: Made in China

Lock Hole Opening Size:

Standard: 3.75 in × 2.75 in × 1.25–1.5 in (H × W × Door Thickness)

Maximum: 4.5 in × 5.5 in × 1.5 in (H × W × Door Thickness)

Power Supply: Requires 4 × AA batteries (Ultra-low consumption due to Zero-Load technology).

Package Includes: 2 × Keys , 2 × Remote Fobs, 1 × Smart Lock , 1 × Pinch Plate, 1 × Strike Plate, 4 × Mounting Screws, 1 × Screwdriver, 1 × User Manual.

Official Support & Installation:

For more details, step-by-step installation instructions, visit: <https://lock.zkce.com>




Universal Fit for Travel Trailers & 5th Wheels

Cutout: 2.75" × 3.75"

Door Thickness: 1.25" – 1.5"

Lock Hole Opening Size

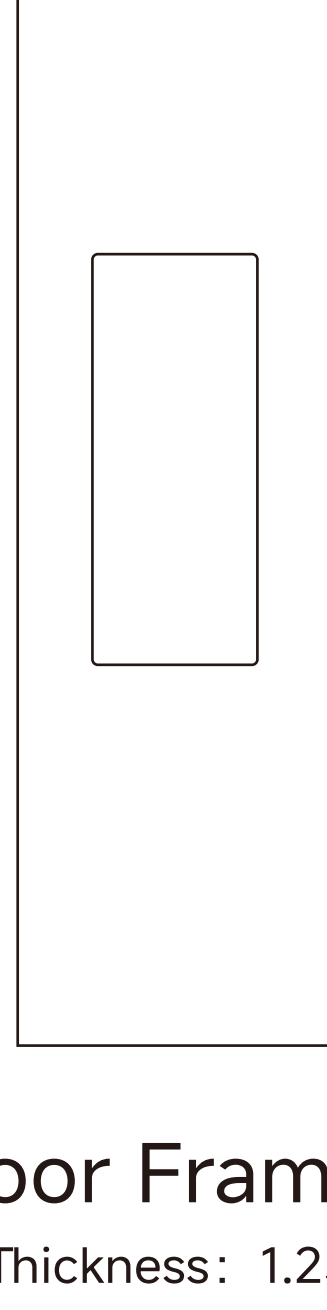

Door Frame

Door Thickness: 1.25–1.5in



Door Opening

Standard: 3.75 in × 2.75 in (H × W)

Maximum: 4.5 in × 5.5 in (H × W)

Built Like a Tank.

90%+ Zinc Alloy Body

5.9" × 4.7"



Heavy-Duty Security for Every RV Door

Set Your PIN

PIN Setup Guide

Add a New PIN

1. Press and hold the ADD button for 3 seconds until you hear a beep.
2. Enter a 4–8 digit PIN, then press the Unlock button.
3. The lock will confirm the setup:
 - One long beep: PIN added successfully.
 - Three beeps: PIN setup failed.
4. To add additional PINs, repeat the same steps.

Note:

The lock is shipped with no PIN programmed by default. After setting a PIN, the remote control will be disabled and must be paired again before use.



Anti-Peep Password

Add random digits before & after
— only your real code unlocks it

× × × [1 2 3 4 5 6] × × ×

↑ Your Code ↑

Reset PIN Settings

1. Press and hold the RESET button until you hear a beep.
2. Press the Unlock button.
3. A single beep confirms the reset.

Factory Reset will:

- Delete all saved PINs.
- Remove all paired remotes.
- Restore the lock to default settings.

After reset, PINs and remotes must be programmed again.

PIN & Battery Status Indicators

- Correct PIN: One beep and the lock unlocks.
- Incorrect PIN: Three beeps.
- Low battery warning: After the beep, the red indicator flashes three times, or three warning beeps sound.

Replace the batteries when the low battery warning appears.

Pair Your Remote

Remote Pairing Guide

Add a New Remote

1. Before pairing a remote, make sure a PIN has already been programmed.
2. Press and hold the ADD button for 3 seconds until you hear a beep.
3. Press any button on the remote control.
4. A single beep confirms that the remote has been paired successfully.
5. To add additional remotes, repeat the same steps.

Note:

The lock is shipped with no PIN programmed by default. After setting a PIN, the remote must be paired before it can be used.



Replace Remote Battery

The remote uses a coin cell battery.

When the battery is depleted:

1. Remove the screws on the remote.
2. Open the back cover.
3. Replace the battery with a new one.
4. Reinstall the cover.

Reset Remote Settings

1. Press and hold the RESET button until you hear a beep.
2. Press the Unlock button.
3. A single beep confirms the factory reset.

Factory Reset will:

- Delete all saved PINs.
- Remove all paired remotes.
- Restore the lock to default settings.

After reset, all PINs and remotes must be programmed again.

Operation & Verification Guide:

1. Digital Keypad Operation

To Unlock: Enter your customized passcode, then press the Unlock key.

To Lock: Simply press the Lock key directly. No code required.

2. Wireless Remote Fob Operation

To Unlock: Press the Unlock button on the remote fob.

To Lock: Press the Lock button on the remote fob.

3. Interior Controls (From Inside the RV)

To Exit/Open Door: Rotate the handle to disengage the latch and open the door.

To Lock/Unlock the Exterior Handle: Turn the interior deadbolt knob.

Note: The interior handle will always allow you to open the door and exit from the inside, even when the lock is set to the secured/locked position. Turning the interior knob strictly controls whether the door can be opened from the outside.

4. Physical Mechanical Key Operation

To Unlock: Insert the mechanical key into the exterior cylinder and turn to unlock the door.

To Lock: The physical key is engineered exclusively for entry/unlocking and does not feature a locking function.

To lock the vehicle mechanically, turn the interior knob to the "Locked" position prior to exiting, then close the door. The door will immediately secure itself, allowing for keyless lockups.

NOTICE:

Always keep your backup keys OUTSIDE the RV. Your mechanical key operates on a completely independent system—ensure you have it on hand to guarantee entry in case of an electronic emergency.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

